One last thing…

We've supplied two emergency keys you will see these are digital keys, they do not store your fingerprint data, they only bypass the system. They do not run on batteries, you will however need to make sure they stay away from water. Use these in case you forget your password. We recommend you record one finger from each hand- this will ensure that you'll be able to enter your home- just in something happens to your hand.

Warranty Information.

Subject to terms and conditions of this warranty, Maxwell Biometrics, INC extends a 1 year electronics warranty to the original consumer of our product against defects in material and workmanships long as the original user occupies the residential premise upon which the product was originally installed.

Upon return of the defective product, Maxwell Biometrics sole obligation, at its option, is to either repair or replace the product or refund the original purchase price in exchange for the product.

The following costs, expenses and damages are not covered by the provisions of this limited warranty (i) the labor costs including but not limited to, the costs of the removal and reinstallation of the product. (ii) shipping and freight expenses required to return the product and (iii) any other incidental, consequential indirect special/punitive damages weather based on contract, warranty, tort (including, but not limited to strict liability or negligence) patent infringement , or otherwise, even if advised of the possibility of such damages. Some local laws do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

The provisions of this warranty do not comply to products (i) used in commercial applications (ii) used in common area applications (iii)used for purposes for which they are not designed or intended (iv) which have been subjected to alteration, abuse, misuse, negligence or accident; (v) which have been improperly stored, installed, maintained or operated; (vi) which have been used in violation of written instructions provided by Maxwell Biometrics, Inc . (vii) which have been subjected to improper temperature, humidity, or other environmental conditions; or (viii) which, based on Maxwell Biometrics, examination, do not disclose to Maxwell Biometrics satisfaction non-conformance Additionally this warranty DOES NOT COVER scratched, abrasions, or deterioration due to the use of paints, solvents or other chemicals. Refer to your local laws for your specific rights under this warranty.

Welcome.

The Mercury Collection

CONTENTS

Bits & Pieces
Page 3

Let the fun begin
Page 4

And it continues…
Page 5

The Codes
Page 6

Restoring factory settings
(and other unique settings)
Page 7

Resetting your system.

In the battery box there are two buttons the ADEL and BDEL buttons. ADEL will reset your lock to it's original factory conditions. Press this down (for about 10 seconds) until you hear the device beep 3 times. Once this is done your lock has been successfully reset.

The BDEL button was used by our team to program your digital keys, please do not press this, as doing so many cause your keys to be reset.

For Your Safety:
If you enter the incorrect password your system will shut itself down for 3 minutes. After this state of dormancy you will be able to access your keypad again.

Fingerprint Code List

Admin #1 code is 2. Admin #2 code is 3

1	32	26	3223	51	3444	76	4442
2	33	27	3224	52	4222	77	4443
3	34	28	3232	53	4223	78	4444
4	42	29	3233	54	4224	79	52222
5	43	30	3234	55	4232	80	52223
6	44	31	3242	56	4233	81	52224
7	322	32	3243	57	4234	82	52225
8	323	33	3244	58	4242	83	52233
9	324	34	3322	59	4243	84	52234
10	332	35	3323	60	4244	85	52235
11	333	36	3324	61	4322	86	52243
12	334	37	3332	62	4323	87	52244
13	342	38	3333	63	4324	88	52245
14	343	39	3334	64	4332	89	52253
15	344	40	3342	65	4333	90	52254
16	422	41	3343	66	4334	91	52255
17	423	42	3344	67	4342	92	52333
18	424	43	3422	68	4343	93	52334
19	432	44	3423	69	4344	94	52335
20	433	45	3424	70	4422	95	52343
21	434	46	3432	71	4423	96	52344
22	442	47	3433	72	4424	97	52345
23	443	48	3434	73	4433	98	52353
24	444	49	3442	74	4433		
25	3222	50	3443	75	4434		

Delete a Non-Admin fingerprint:
3+admin print+ corresponding code+1

Delete all user fingerprints:
3+admin fingerprint+2222+1

For example: There are 5 employees in an office, Jim and Jack have the admin fingerprints. Allen records his fingerprint as the 1st non-admin fingerprint. Vivian is 2nd, and Jane is 3rd. When Vivian transfers out, her fingerprint has to be deleted. Since she is the 2nd one to record a non-admin fingerprint, her corresponding code of 2 is "33". You'll have to input "3+admin fingerprint+33+1" to delete Vivian from the system. Suppose Tracy begins working after Vivian. When Tracy's fingerprint is recorded, the storage space of Tracy's fingerprint is the place where Vivian's fingerprint was stored previously. In other words, its number is "2"(corresponding with "33"). Employees after Jane will follow suit

Opening the door with Fingerprint AND Password.

Your system is made to automatically open via fingerprint, however if you'd like to open your door with fingerprint and password (one after the other) you can slide up the cover and press "5" for 3 second, the red light will flash quickly, and 1second later the green light will turn on, then press the admin fingerprint. The buzzer and green light will flash twice. From this moment on you will need your fingerprint AND password to open the door. Passwords cannot be changed while the lock is on this setting. To open: Press fingerprint (wait for green light), + type your code + press 1 to confirm.

If you want to revert this, and go back to its original setting of fingerprint only please follow the steps above. Once the buzzer make 3 long sounds (instead of 2) you have successfully changed the lock back to its original setting.

What it looks like….

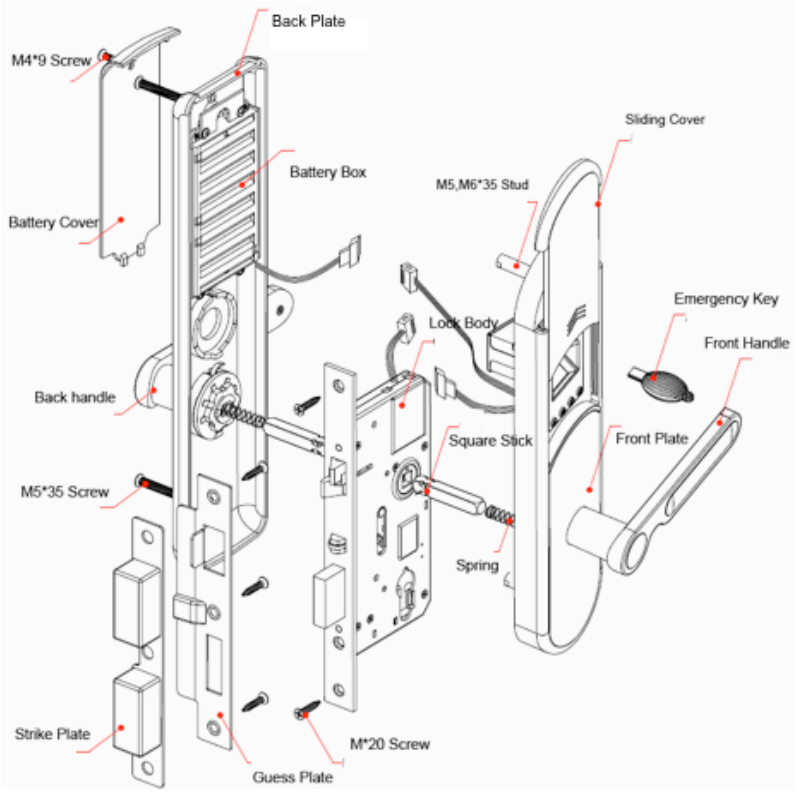

Due to the intricacy of our system we recommend a professional locksmith to install your new system. Maxwell Biometrics Inc. is not responsible for installation costs. Your System can hold up to 100 fingerprints. You'll need some AA batteries to get stated.

Up and Running…

Please note that your hands must be dry when using this device. Wet hands will make it difficult for the bio semi-conductor to read your fingerprint. Also be sure to record one finger on each hand (in case of injury)

Setting The Admin Fingerprint:

The Admin fingerprint will be able to add and remove any and all fingerprints from the device. You are given 2 admin fingerprints, the 98 additional prints will be able to use the lock, but they will not be able to delete or add users.

Slide up the cover + Press 2 (the red light will flash and the device will make a sound) + Place your Fingerprint onto the pad once until it beeps and then again (about 1 second later) **until** the red *and* green light flash 3 times. (If only the red light flashes repeat the process, as your prints were not read correctly)

You will have to lift your finger after the first beep and then place it back on the pad until your device beeps 3 times and flashes the Green and Red Light.

Setting The Second Admin Fingerprint:

Slide up the cover + Press 2 +place original admin fingerprint (green light will flash) + Press 2 +New Admin Fingerprint.
You will have to lift your finger after the first beep and then place it back on the pad until your device beeps 3 times and flashes the Green and Red Light.

To add user fingerprints:

Slide up the cover + Press 2 +admin fingerprint (either one-- The green light flashes and the buzzer will make a sound.)+ new fingerprint (The green light and the buzzer makes a sound) Press the fingerprint again, when successfully recorded the green and red light will flash. (You'll lift your finger right after your system blinks green and then place your finger back on the pad).
If the device fails to record the print only the red light will flash.

To Delete All User Fingerprints

Slide up the cover+ Press 3 (Red light will flash)+ admin fingerprint (either one- green light will flash)+"2222"+ 1 to confirm. Wait until the buzzer and green light flash 3 times.

Deleting a Single User Fingerprint via Fingerprint

Slide up the cover+ Press 3 (red light and buzzer will flash)+admin fingerprint (any one-green light will flash)+the fingerprint that you want to delete. The green light will turn on and the buzzer will make a long sound.

Deleting a Single Fingerprint Using the Fingerprint ID Code

Chart of Codes Are Located On Page 6.

Slide up the cover + Press 3 +admin fingerprint (either one)+ Fingerprint ID Code of print you want to delete + Press 1. (See page 6 for information on ID Codes)

To Revise the Password

The original password is 23456

Slide the cover up+ Press 1(red light will flash with sound)+ Admin Fingerprint (Green light will flash with sound) + your new password (must be between 6-12 digits from key 2, 3, 4, 5 or 6) + Press 1+ new password again + Press 1 to confirm

If the green light flashes and the buzzer makes 3 long sounds then you have successfully changed the password.

Revising your new password:

Slide up the cover+ Press 1+admin fingerprint + new password(6-12 digits using keys "2", "3", "4", "5" and "6") a red light will light up for every digit pressed + press 1+ re-enter your new password + & press 1.
After 3 beeps and a green light you're good to go.

Using your Password to Open the Lock

Slide up the cover + Press 1+ Enter Your Password (6-14 digits) + Press 1

Lets Say You're Moving

And you want your door to be unlocked from the outside. You can press 6 + your fingerprint +6 and your lock will go into docile mode. You will able to re-activate it by simply using the device again.